


# ACCESSORIES

## JUNCTION BOXES

### → **BDM1281E6S:**

This module allows you to wire up to 6 ANATOM78SM12 or ANATOM98SM12 in series and to retrieve independently the auxiliary line of each safety switch.

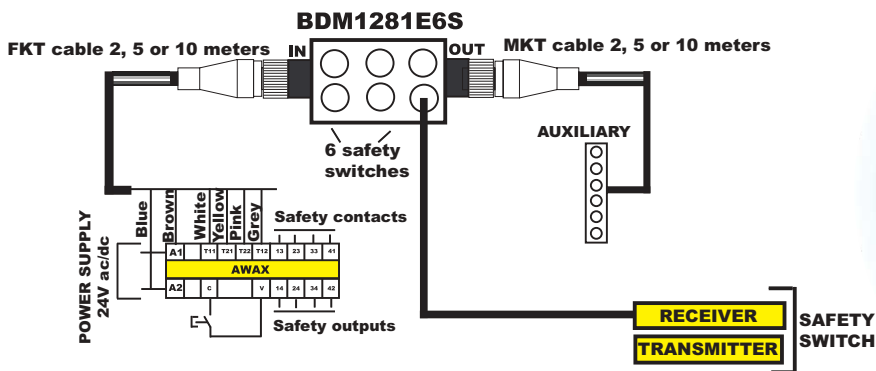

### → **BDM1281E5S:**

This module allows you to wire up to 32 ANATOM78SM12 or ANATOM98SM12 in series using up to 8 junction boxes.

