

# TM11PCT2

Part Number




## Technical Data

Optical Data	
Range	100 mm
Switching Hysteresis	< 15 %
Light Source	Infrared Light
Wave Length	880 nm
Service Life (T = +25°C)	100000 h
max. Ambient Light	10000 Lux
Opening Angle	12 °
Electrical Data	
Supply Voltage	10...30 V
Current Consumption (U <sub>b</sub> = 24V)	< 40 mA
Switching Frequency	2 kHz
Response Time	250 μs
Temperature Range	-25...60 °C
Switching Output Voltage Drop	< 2.5 V
PNP Switching Output/Switching Current	200 mA
Short Circuit Protection	yes
Reverse Polarity Protection	yes
Overload Protection	yes
Lockable	yes
Teach Mode	NT,MT
Mechanical Data	
Adjustment	Teach-In
Housing	Plastic
Full Encapsulation	yes
Protection Mode	IP 67
Connection	M 12x1
Protective Insulation, Rated Voltage	50 V


- Compact Housing
- Teach-In, external Teach-In, RS-232 Interface

The transmitter and the receiver are integrated into a single housing. The sensor evaluates transmitted light reflected back from the object. The output is switched as soon as an object passes the selected range. Bright objects reflect more light than dark objects, and can thus be recognized from greater distances.

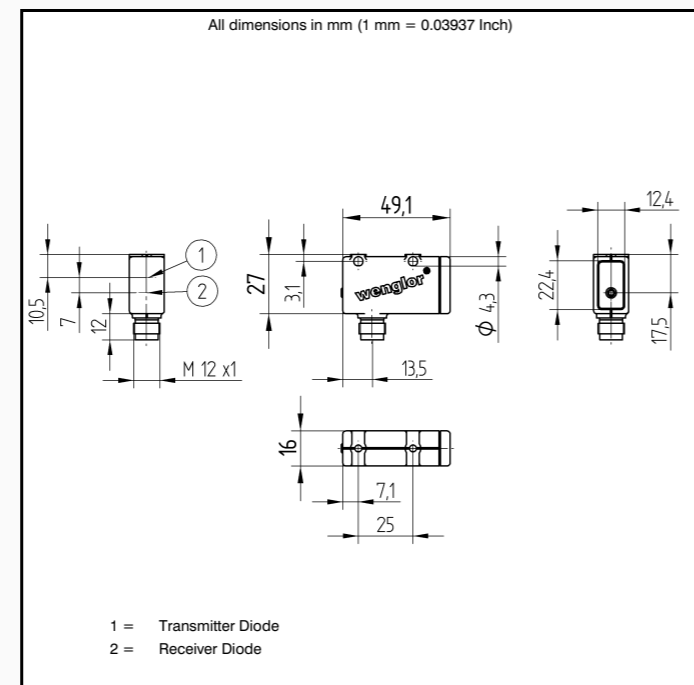

Specifications are subject to change without notice  
11/03

Part Number	TM11PCT2
PNP NO/NC switchable	●
RS-232 with Adapterbox	●
Connection Diagram No.	152
Control Panel No.	M 3
Suitable Plug No.	1

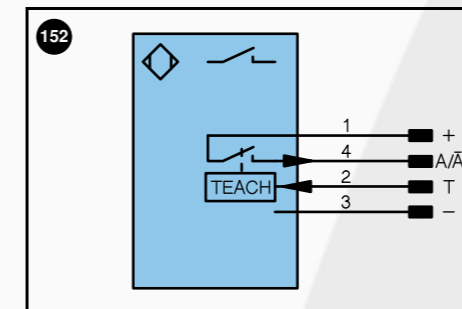


Legend		Wire colors according to DIN IEC 757
+	Power supply "+"	BK black
-	Power supply "0V"	BN brown
~	Power supply (AC Voltage)	RD red
A	Switching output (1,2,3...)/ NO	OG orange
Ā	Switching output (1,2,3...)/ NC	YE yellow
V	Contamination / Error output (NO)	GN green
∇	Contamination / Error output (NC)	BU blue
E	Input (analog or digital)	VT violet
T	Teach input	GY grey
Z	Time delay (activation)	WH white
S	Shielding	PK pink
RxD	RS-232 receive path	GNYE green yellow
TxD	RS-232 send path	
U	Test input	
W	Trigger input	
O	Analog output (1,2,3,...)	
O-	Ground for the analog output	
BZ	Block discharge	
Aw	Valve output	
a	Valve control output "+"	
b	Valve control output "0V"	
SY	Synchronization	
E+	Receiver-Line	
S+	Emitter-Line	
⊕	Grounding	

## Accessories

- Adapterbox A232
- Mounting Bracket WM2

## Ctrl. Panel

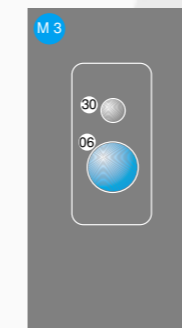

- 06 = Teach Button
- 30 = Switching Status/Contamination Warning